

# *iScan01 HD Portable Handheld A4 Color Scanner*

## *User Manual*



### Product Description:

#### Buttons



##### PG/PDF Exchange

The key change file form of scanning



##### Resolution Exchange

H: 900DPI; M: 600DPI; L: 300DPI



#### Side Jacks



##### Time Set Button



##### USB Port

By this way, you can copy scanner's pictures to computer or link computer to scan



##### IT Card Port




##### Formatting Button

## Menu Introduction:



Support JPG and PDF, JPG default

Scan for PDF, need to change scan mode

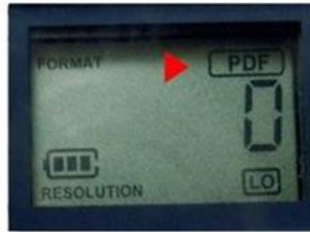

LO Resolution can raise scanning speed for scanning data files

MI Resolution



HI Resolution is suitable for scanning color picture for its clarity

Display will show the pages of scanning



## Usage Instructions:

### 1. Install Batteries

Open cover, put into two A4 alkaline batteries, and then press Power/Scan button

### 2. Insert SD Memory Card

Do not force to insert, it will damage scanner and SD card

### 3. Format SD Card

Press "FORMAT" button, "F" shows on display, then press "SCAN" and it begins to format SD card. When SD card sign on display stop to light, it means it finished formatting.

### 4. Set Resolution, Scanning form and Scanning color

## 5. Begin to Scan

- a. Flatten the scanning object, put on scanner
- b. Grip scanner, press SCAN button to scan
- c. Move scanner slowly, keep it steady
- d. Press SCAN button to finish scanning

## 6. Check Scanning Result

Link computer to see the result

### Troubleshooting:

Problem	Reason	Solution
The scanner power off	1. Low battery 2. Not installed correctly	1. Replace or install new batteries 2. According to the correct method, install batteries.
Picture can't be saved after scanning	1. Micro SD card not installed 2. Micro SD card is full 3. Micro SD card not formatted correctly	1. Correctly install Micro SD card 2. Download the storage images to PC to release the storage space. 3. Please read <i>Usage Instructions</i> section 3.
After connecting with PC can't identify scanner (can't find removable disk)	Fail connection	Make sure all of the cable links are correct or power on PC.
Shortly battery life	Using the wrong model of battery	Change new 2x AA alkaline batteries.
Image fuzzy	Dirt scanner lens	Use soft and dry cloth to clean the lens.
LCD screen unusual	Scanning too fast	Press power/scanning button, then scan again.