

Electronic LED Digital Clock

Model: CX-808

User Manual



Operation:

(1) Butting

(2) Setting Of Time and Date:

- 1- Under normal situation, press SET to begin the setting of date and time, and you will see the hour and minute displays showing the year with flash at the same time;
- 2- Press MODIFY to change year (if you don't want to change the flashing number, do not press modify, the following steps are in the same way); press flash on month display, and then change the month by press MODIFY; press SHIFT to move the flash on day display, and then change the day by pressing MODIFY. During the process of setting, the week follows the date changing automatically;
- 3- Press SHIFT again, the date disappears and the hour flashes, then change the hour by pressing MODIFY; press SHIFT to more the flash or minute display, and then change the minute by pressing MODIFY.
- 4- Press SET again to resume the normal situation.

(3) 12 and 24 hour mode, under normal situation, press MODIFY for 3 second to switch between 12 and 24-hour mode.

(4) Hour Notice Setting: Under normal situation press MODIFY to open or close the hour notice function, and you will see the indicator on or off.

(5) Setting Of Alarm:

- 1- Under normal situation, press ALARM to view the set alarm time, the alarm indicator light is bright. When you see "A1" on the temperature display position, it means what you see on time display is the first group of alarm time. If the time display shows "--:" it means this group of alarm is workable when it shows time, press MODIFY to switch between workable and unworkable.
- 2- Press ALARM to modify alarm. Change the hour by pressing MODIFY while the hour display flashing, then press SHIFT, the minute by the same way.
- 3- Press ALARM to check the second ground of alarm time, the way of setting is same to the first group, USE the same method to finish the setting of the third to eight

groups. After browsing or setting all groups of alarm time, press ALARM to back the normal situation. If all these eight groups of alarm time are unworkable, the alarm indicator light will be off.



3 Belling Mode:

- (1) While connecting to the power, the clock starts to bell and then play a piece of music.
- (2) Hour Notice: Hour notice indicator light is on, when the function is workable, it will bell and play a piece of music at every o'clock from 7:00 to 21:00
- (3) Alarm: the clock bells in time every day, the sound sell of the bell is "dong dong dong" It lasts one minute.

4 Other Instruction:

- (1) Under any settling situation, if there are no operations within 30 seconds. It will back the normal situation automatically.
- (2) Any setting situation, press End to back the under normal situation.
- (3) While belling, press any button to stop and then set the relevant function
- (4) Under especial situation, when LED is confusion or do not show, use the toothpick to press RESET to reset the time.