

Universal A/C Remote Model:K-1036E+L



Manual Programming:

1-Put batteries in the control and turn on the air-condition

2-Look at the name of the air-condition in the codes table and see its c

3-Press set all the time until the code in the screen start flashing.

Note: to move from one code to another press temp + or temp -

4-When you reach the code you need press OK again.

5-Try the control

Auto Programming:

1-Put batteries in the control and turn on the air-condition

2-Press set all the time until the code in the screen start flashing.


3-Press temp+ all time the codes increase fast until the air condition o

Note: you have to release the temp+ button directly when air-conditic

4-Press OK

5-Try the control

Note: if some key didn't work continue to do the same operation until all keys work probably

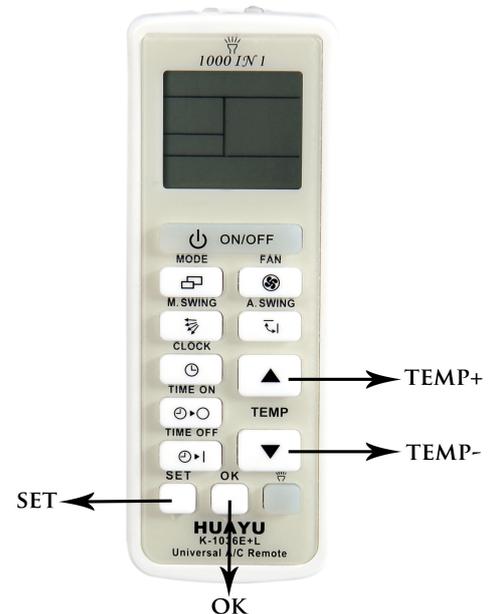

برمجة يدوية:

1- ضع البطاريات أشعل المكيف.


2- إبحث عن اسم المكيف في جدول الكودات

3- إضغط كبسة set بشكل مستمر الى ان يبدأ الكود على الشاشة يضيئ ويطفئ على التوالي (flasher)

ملاحظة: للانتقال من كود لأخر إضغط كبسة +temp او كبسة -temp

4- عند الوصول إلى الكود المطلوب إضغط كبسة OK مرة اخرى

5- جرب الريموت

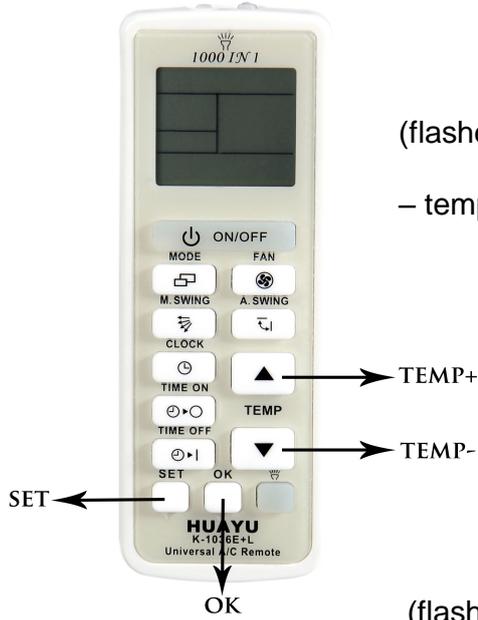

برمجة آلية:

1- ضع البطاريات أشعل المكيف

2- إضغط كبسة set بشكل مستمر إلى أن يبدأ الكود على الشاشة يضيئ ويطفئ على التوالي (flasher)

3- إضغط كبسة +temp بشكل مستمر سنزيد الكود حتى يعمل المكيف

ملاحظة: يجب إفلات الزر عند الوصول إلى الكود المطلوب

4- إضغط كبسة OK

5- جرب الريموت

ملاحظة: إذا لم تعمل جميع الأزرار أعد عملية البرمجة