
ADGXX-DIN OVER and UNDER VOLTAGE CONTROL RELAY

- Over & Under Voltage % Adjustment
- Phase Failure
- Phase Sequence
- Delay Time Adjustment

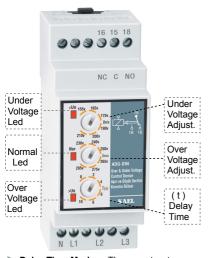

PRODUCTION CODE	VOLTAGE ADJUSTMENT INTERVAL (%)		TIME DELAY INTERVAL		SUDDEN OPENING	PHASE	TRI	MONO	USAGE	
	Under Voltage % (<un)< th=""><th>Over Voltage % (>Un)</th><th>Time Delay</th><th>Function</th><th><0,65xUn >1,35xUn</th><th>SEQUENCE CONTROL</th><th>PHASE</th><th></th><th></th><th>DIMENSIONS</th></un)<>	Over Voltage % (>Un)	Time Delay	Function	<0,65xUn >1,35xUn	SEQUENCE CONTROL	PHASE			DIMENSIONS
ADG-31	(0,70-0,95)xUn	(1,05-1,30)xUn	1-10 s.	Off Delay	•		•		Command, control or compensation systems, electrical motors, condensers	35x90x58
ADG-33	(0,70-0,95)xUn	(1,05-1,30)xUn	1-10 s.	Off Delay	•	•	•			
ADG-35	(0,70-0,95)xUn	(1,05-1,30)xUn	1-10 min.	On Delay	•		•		Air conditioners and compressors	
ADG-37	(0,70-0,95)xUn	(1,05-1,30)xUn	1-10 min.	On Delay	•	•	•			
ADG-11	(0,70-0,95)xUn	(1,05-1,30)xUn	1-10 s.	Off Delay	•			•	Command, control systems	
ADG-15	(0,70-0,95)xUn	(1,05-1,30)xUn	1-10 min.	On Delay	•			•	Air conditioners.	

General:

Microprocessor controlled. Three or single phase relay is used in systems exposed to over or under voltage, such as command, control or compensation systems and protects devices such as condensers, motors, air conditioners and compressors. It is divided into sub-categories depending on the voltage adjustment range, phase sequencing control, on or off start modes.

Normal

Phase Sequencing Control : For the models with phase sequencing control, when device is energized, if the phase sequence is wrong, over (>Un) and under (<Un) LEDS are turned on together and phase sequence error is indicated. Meanwhile, Normal LED (Un) is turned off and relay contact is open circuit. In case of phase sequence is correct and phase voltages are in adjusted percentage range, the delay time for turning the Normal LED on and energizing the relay depends on the Off Delay or On Delay type of device. For further information please refer to graph 1 & 2 and Delay Time Modes section of this manual.</p>

Umax

Un Umin

Delay Time Modes : There are two types, one is Off-Delay and the other is On-Delay.
Off Delay : (refer graph 1)

If phase voltages are in the adjusted percentage range, normal LED turns on and relay contact is energized. When adjusted over or under voltage limit is exceeded 1-10 sec delay time is started. During this time interval, appropriate error LED is also on together with Normal LED and at the end of delay time, Normal LED is turned on and relay contact is de-energized. When the error condition is disappeared, Normal LED is turned on and relay contact is re-energized.

• On Delay : If phase voltages are in the adjusted percentage range, adjusted delay time, 1-10 min, is counted and at the end of delay time Normal LED is turned on and relay contact is energized. When adjusted over or under voltage limit is exceeded, Normal LED is turned on and relay contact is de-energized immediately, without waiting any delay time. When the phase voltages return into adjusted normal range (also considering the difference), adjusted 1-10 min delay time is counted and at the end of this time, Normal LED is turned on and relay contact is re-energized.

Umax Umax Umax Under Voltage Under Voltage Under Voltage Under Voltage

Connection Scheme

16 15 18

NC C NO

KAEL


Over Voltage

Norma

Sudden Switch Off: When any phase voltage's difference respect to nominal voltage exceeds 35%, without any time delay Normal LED is turned off and relay contact is de-energized.

Voltage Adjustment Range :

Umin= $(0.70 - 0.95) \times Un$; Umax= $(1.05 - 1.30) \times Un$; When the adjusted limits are not exceeded, Normal (Un) LED is on and the relay contact is energized.

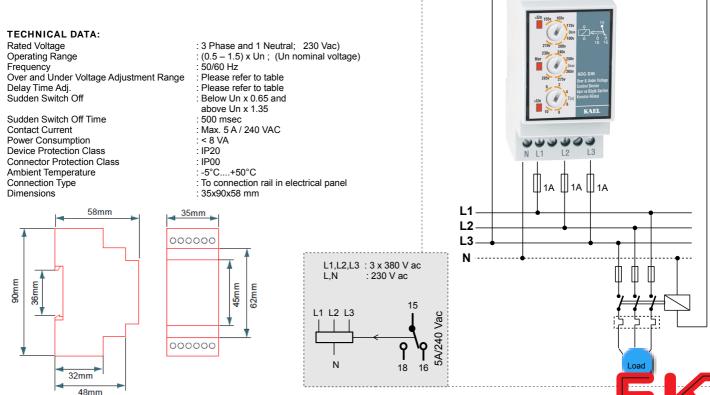

Electronics Katrangi Trading

www.ekt2.com

